

*****HT Multiple Load Instruction*****

Dear Valued Customer,

In the unlikely event Honeywell Ships a second database during any given Cycle (i.e. xxx-0804-001, xxx-0804-002, -003....) You will need to follow the instructions below to load the system.

- 1. Connect and power up the data loader with card inserted**
- 2. Loader will display "LOAD NAV DB"**
- 3. Press the MODE button. Display will change to "LOAD OVER ACTIV?"**
- 4. Press the EXE button. Display will change to "Cycle XXX OK?"**
- 5. Press the EXE button.**

This will load the database over the database you are currently using. This enables you to have the most current information available.

Questions regarding this letter please contact via email to:
Aviation.services@honeywell.com